



The most important thing we build is trust


Media Xchange Point

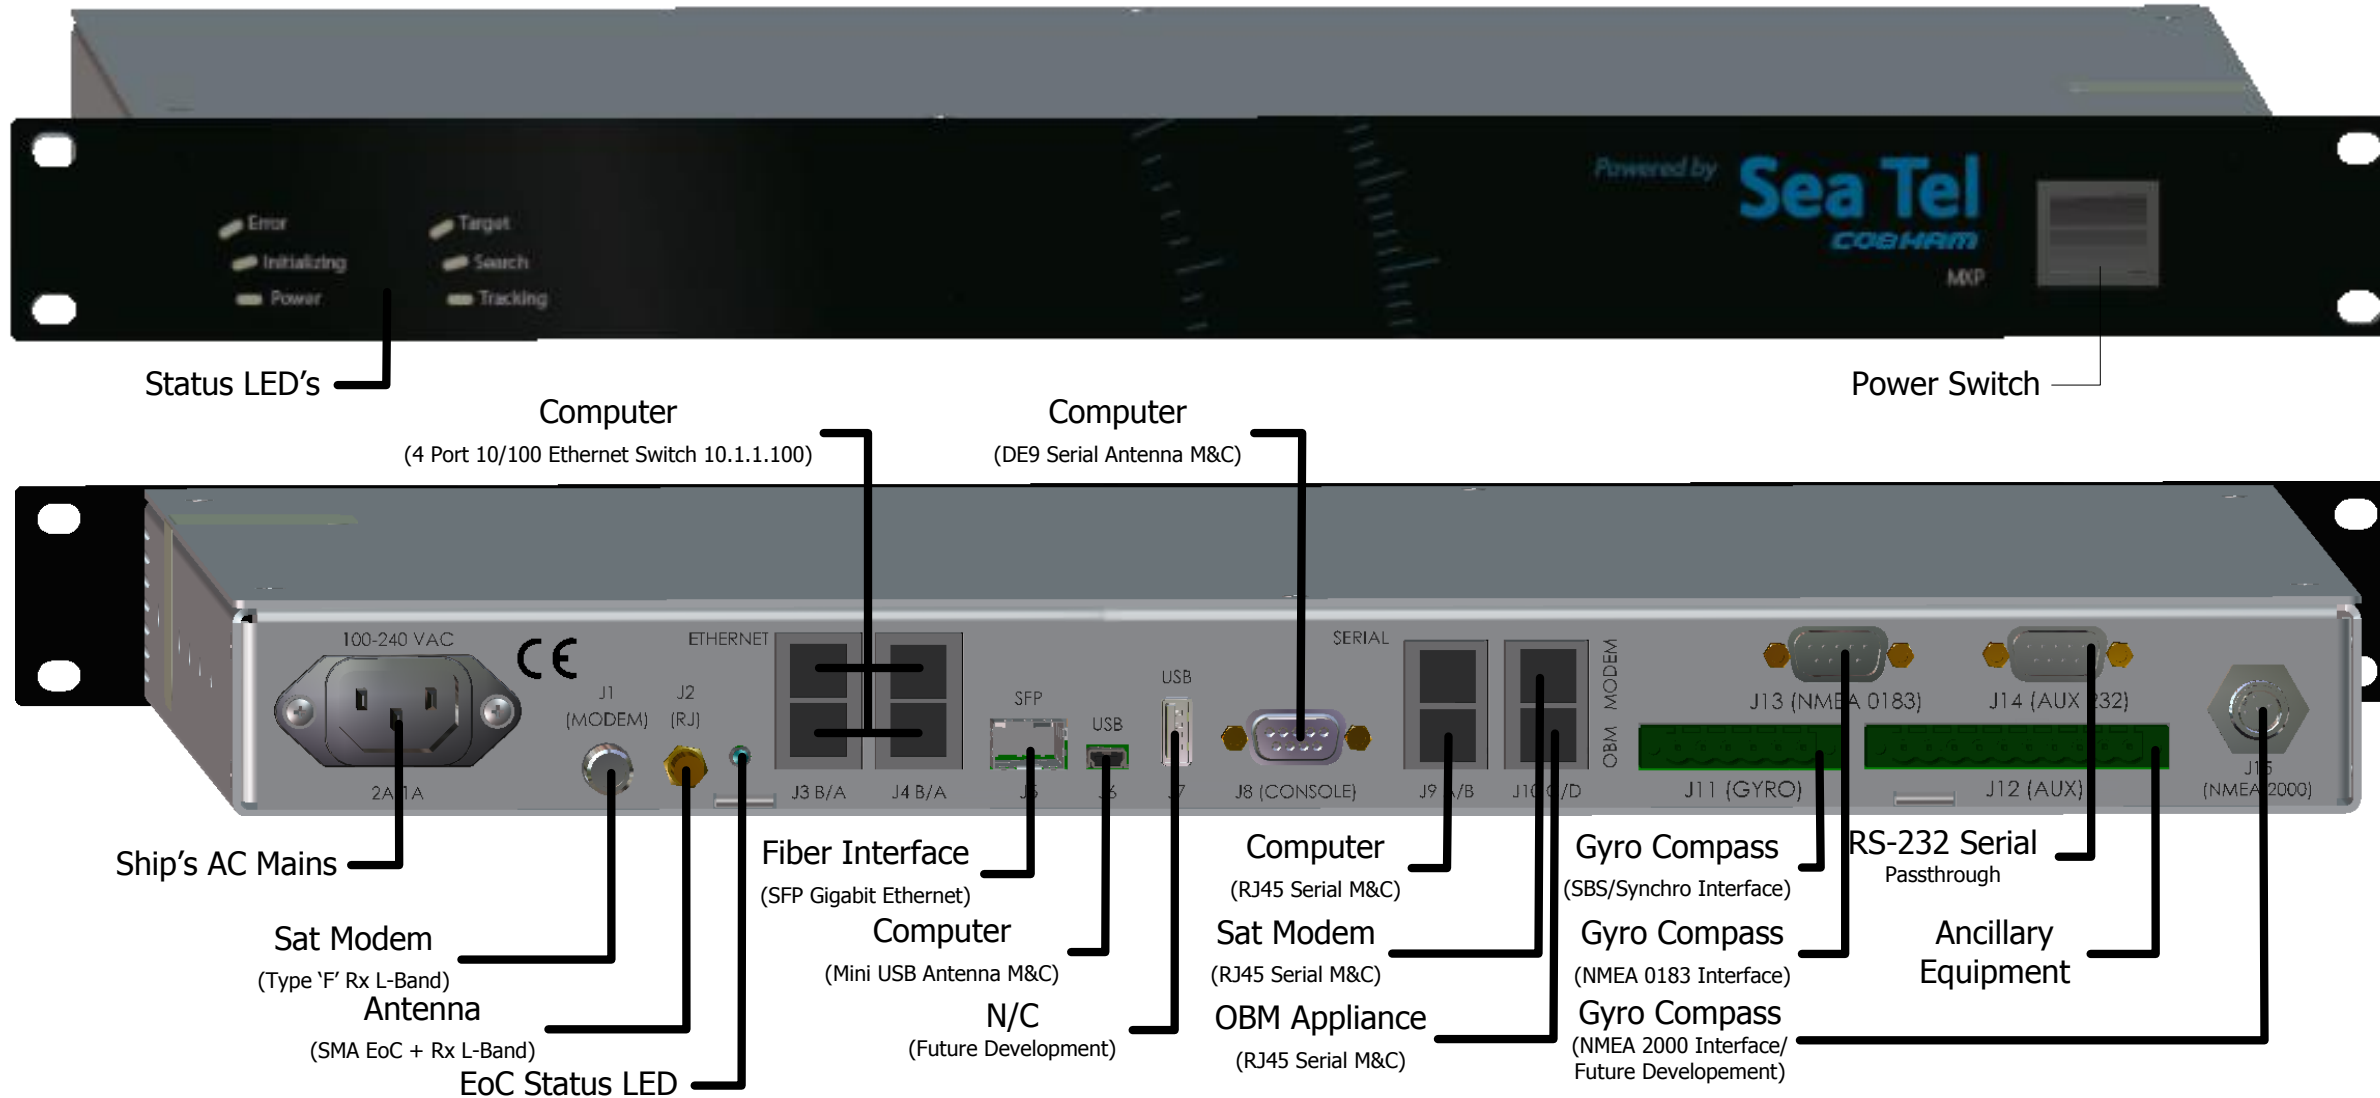

Motor Driver Enclosure


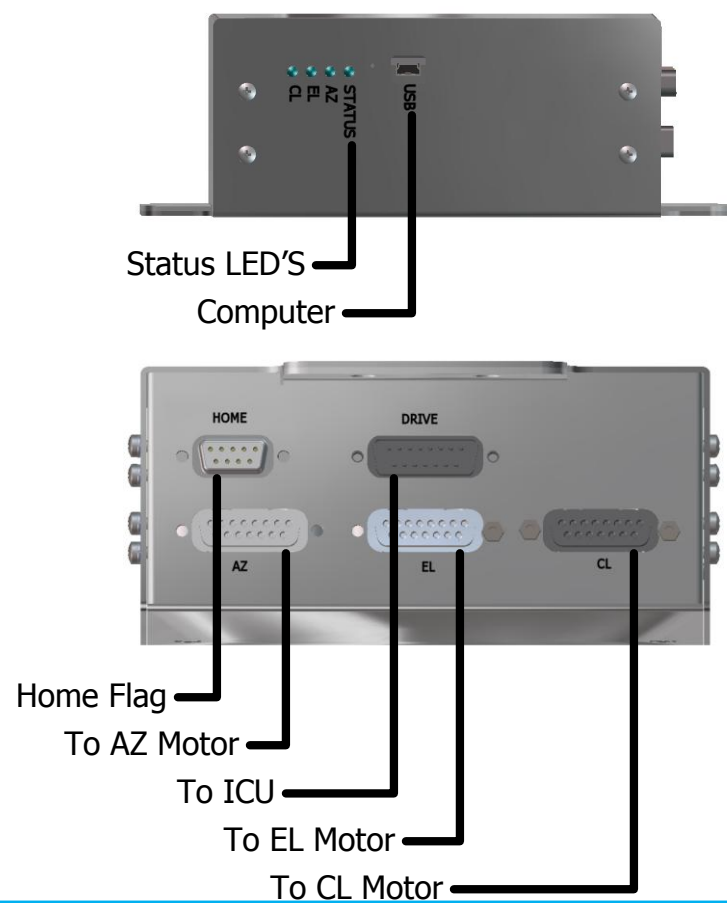


Integrated Control Unit

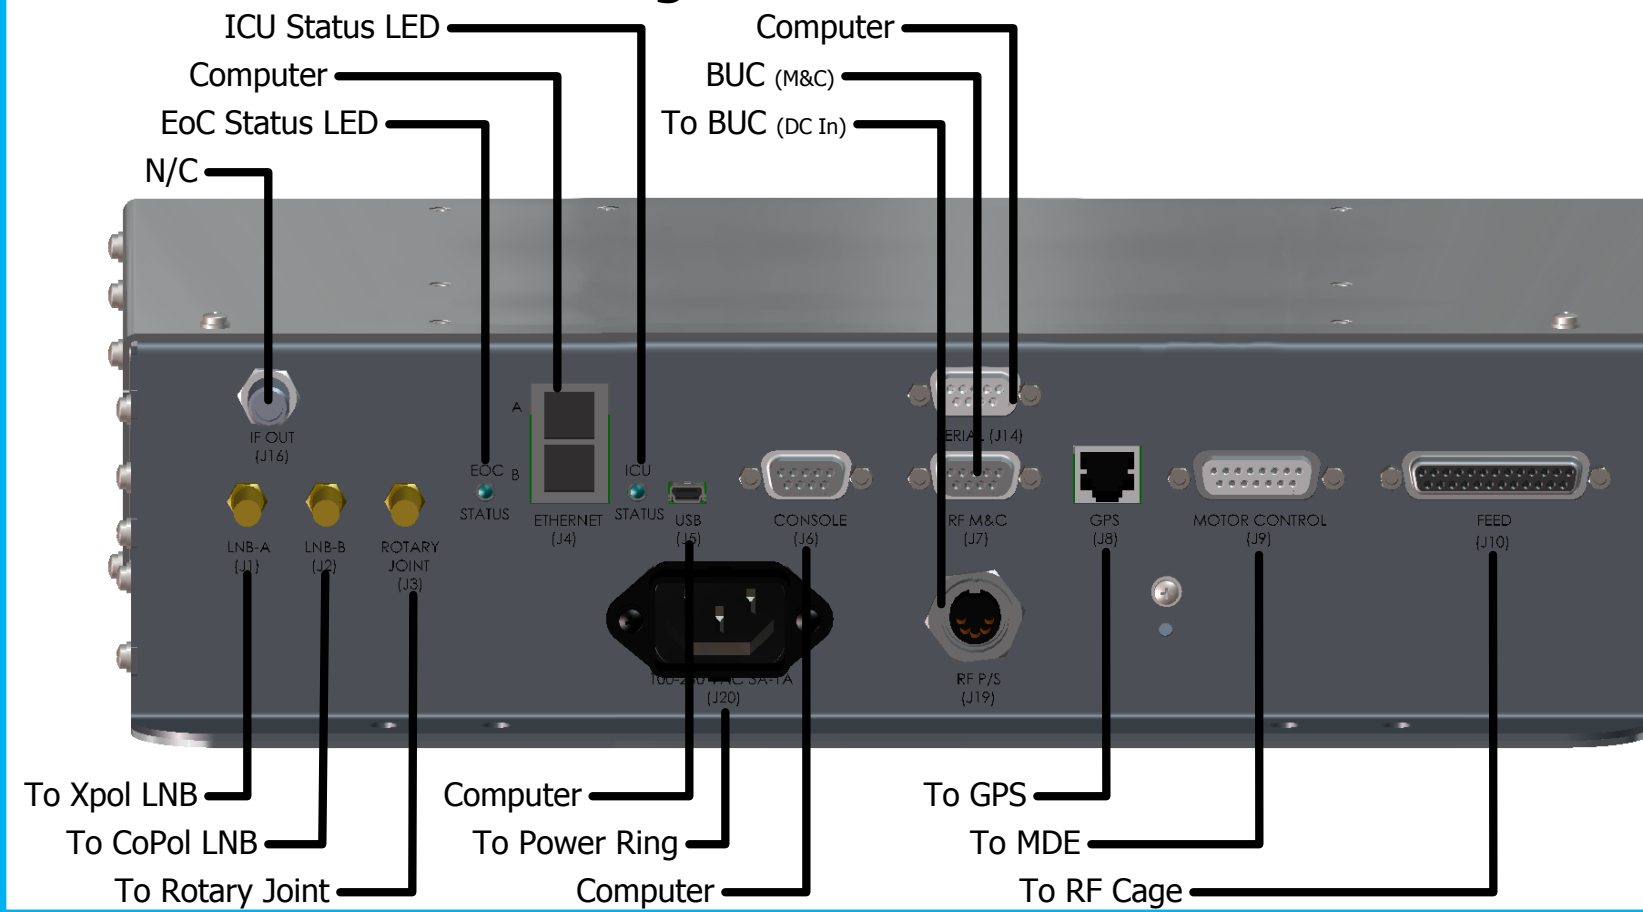

4012 GX General Assembly

Model 4012 GX
Quick Start Guide

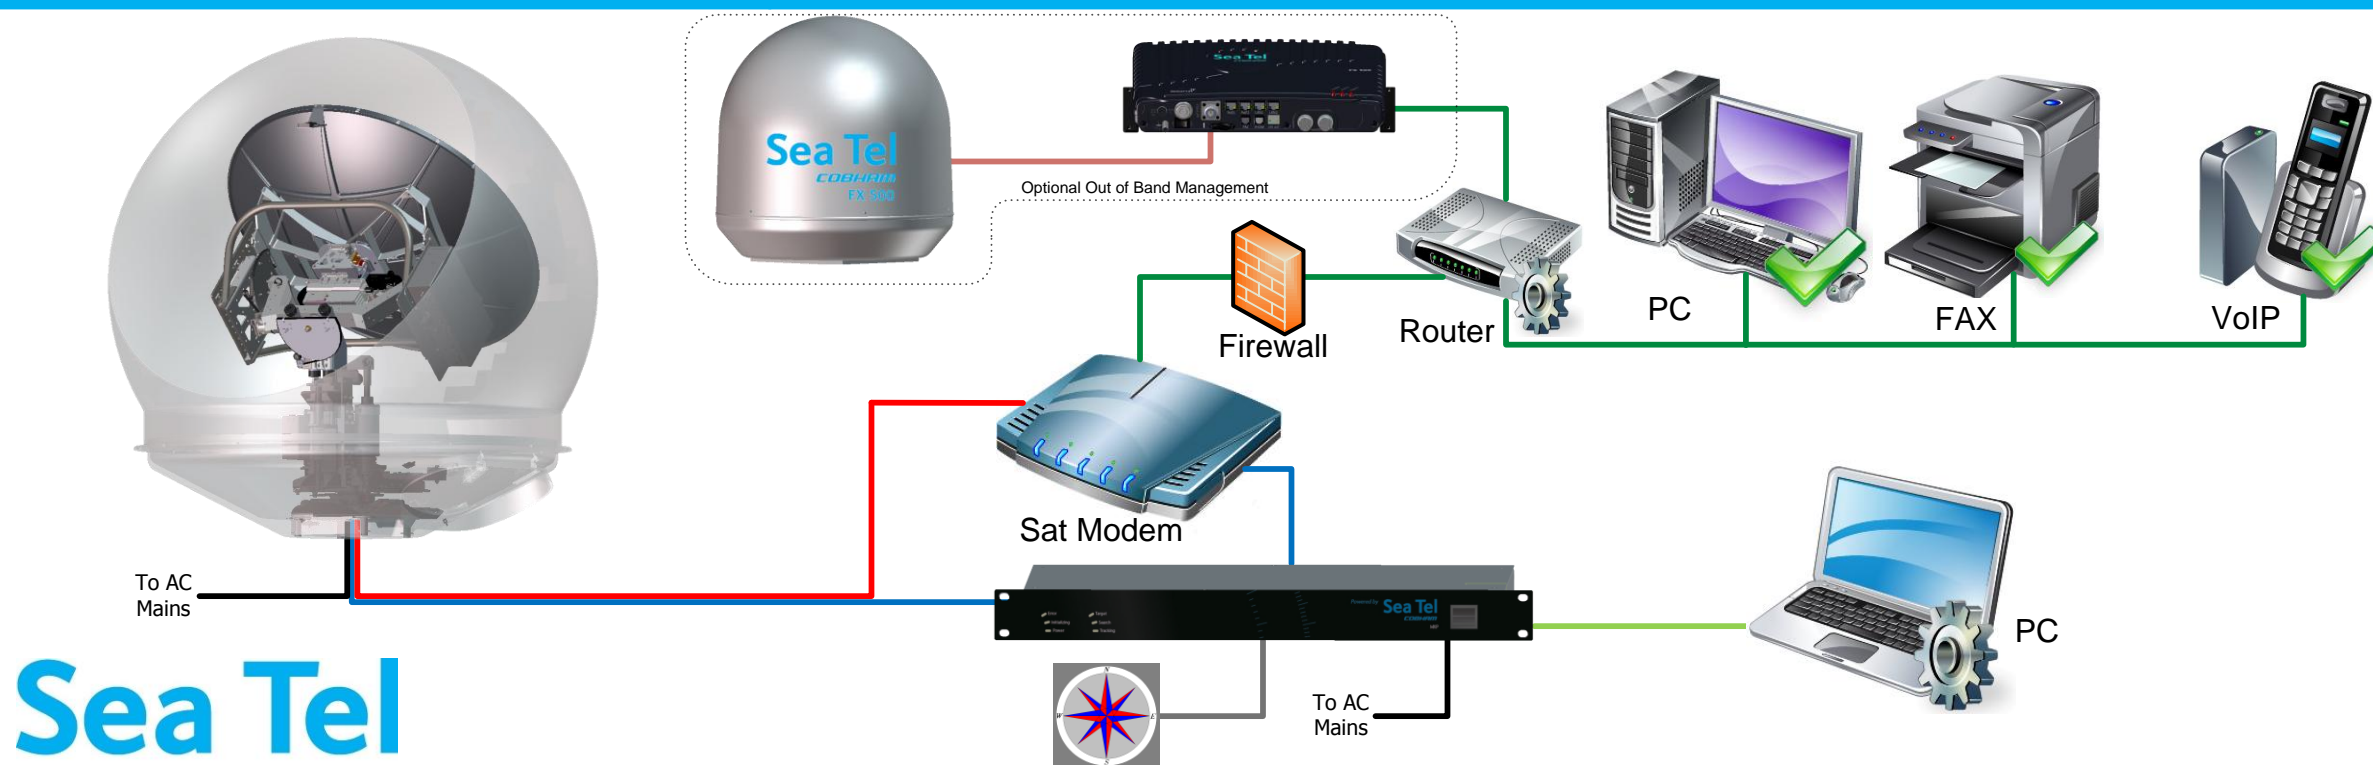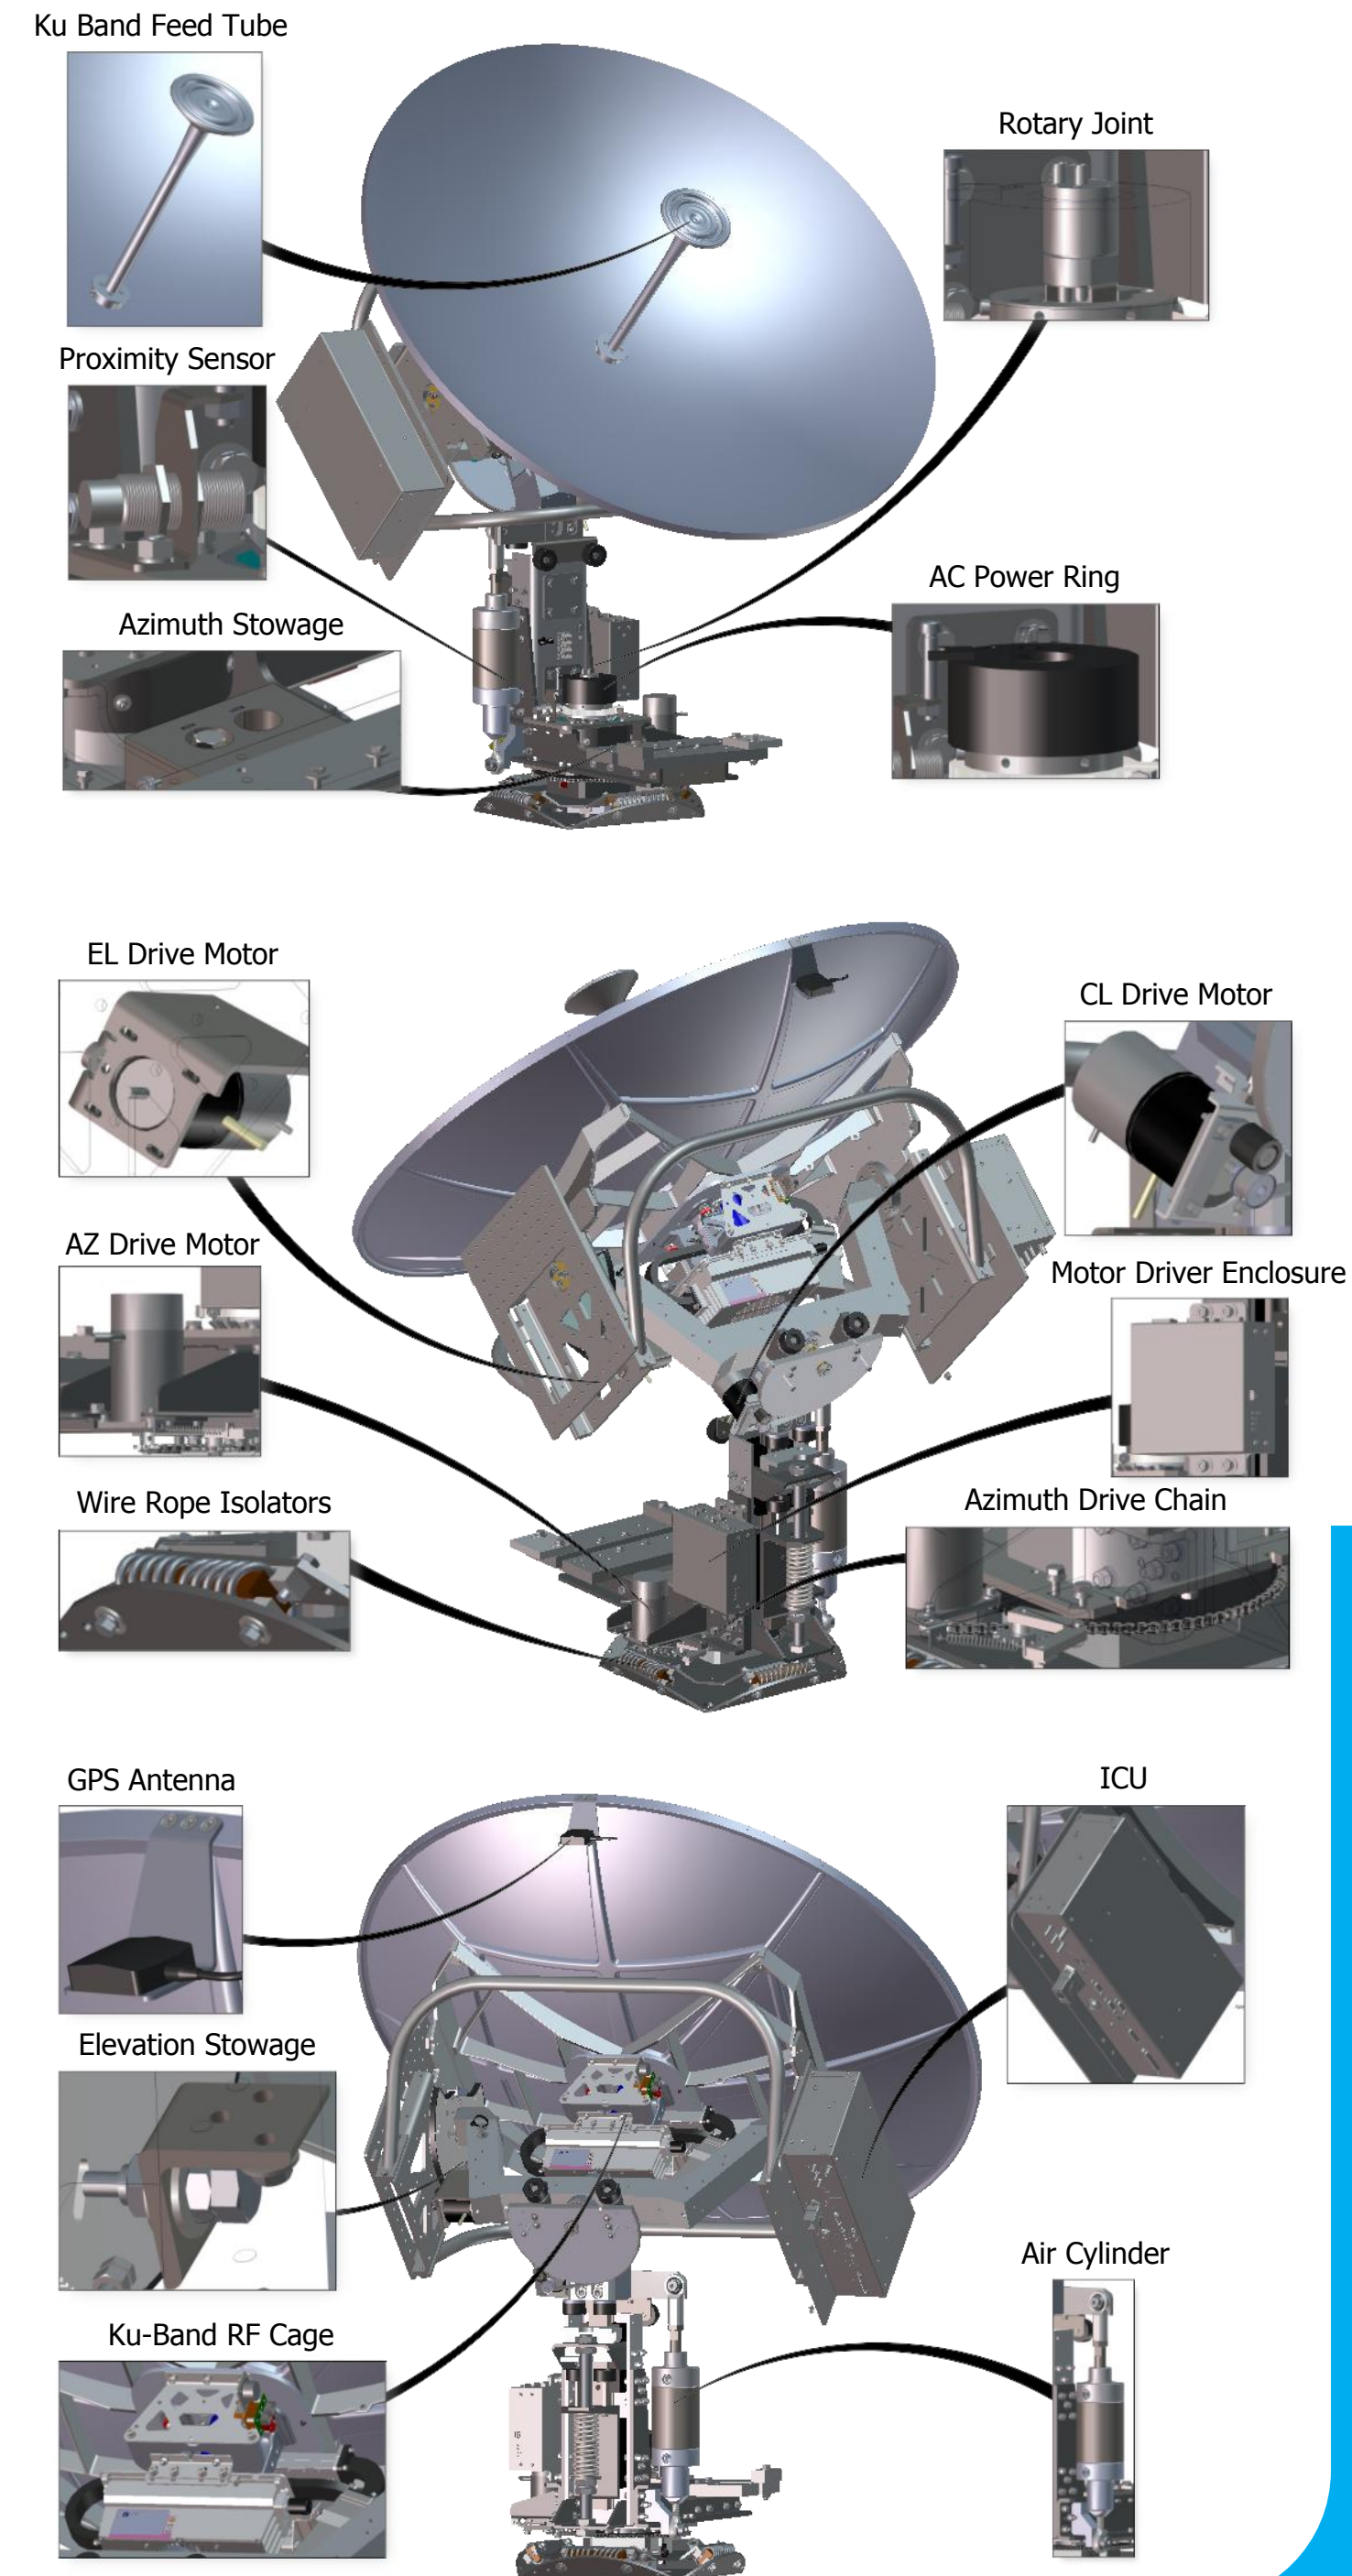

The most important thing we build is trust

Model 4012 GX
Quick Start Guide

Getting Started

Once properly commissioned, the 4012 GX Antenna System requires no user intervention to properly locate, identify and track the correct satellite.

- Apply power to the Above Decks and Below Decks equipment.
- Allow up to 2 minutes for the system to identify the satellite.
- Wait for Sat Modem to process Rx lock, Tx Lock, and Network lock conditions.
- System is now ready for internet and/or VoIP operation.

Changing Satellites

The MXP GUI allows a user to easily command the system to locate a desired satellite by use of customized presets.


- Open up a Web Browser and login to the MXP.
- Select the "Auto" Satellite Search page.
- Select the desired sat from the dropdown menu selection(s).
- Allow up to 2 minutes for the system to identify the satellite.
- Wait for Sat Modem to process Rx lock, Tx Lock, and Network lock conditions.
- System is now ready for internet and/or VoIP operation.

Customizing Presets


The MXP GUI allows a user to easily create or modify satellite presets to be used by the system.

- Open up a Web Browser and login to the MXP.
- Click on the "Satellite" Configuration menu selection.
- Click on "Add Satellite".
- Define all of the satellite parameters for this preset.
- Click on "Save" to commit this preset to memory.
- This new preset is now available for selection on the "Auto" satellite search page.


MXP Web Interface

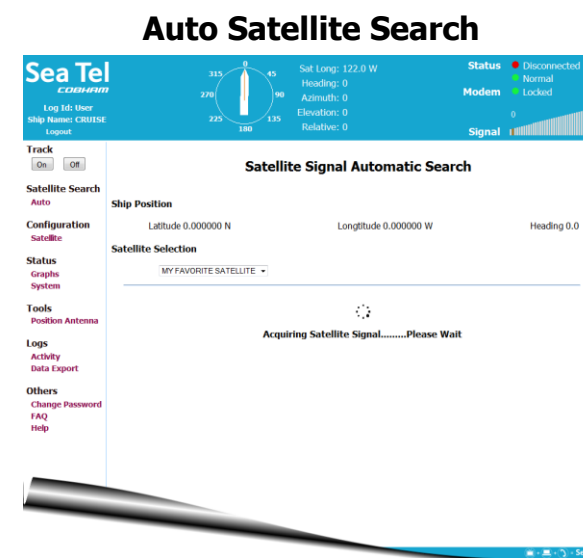


- The Auto Satellite Search page presents the user with a list of customized satellite presets to choose from.

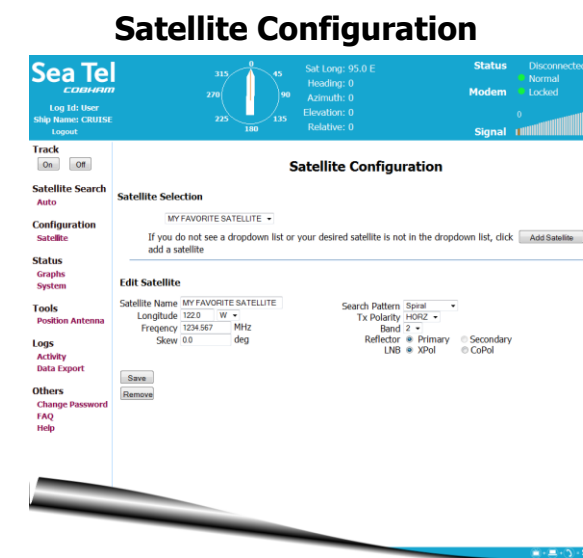


- The Satellite Configuration page presents a user with the option of creating or modifying a satellite preset.

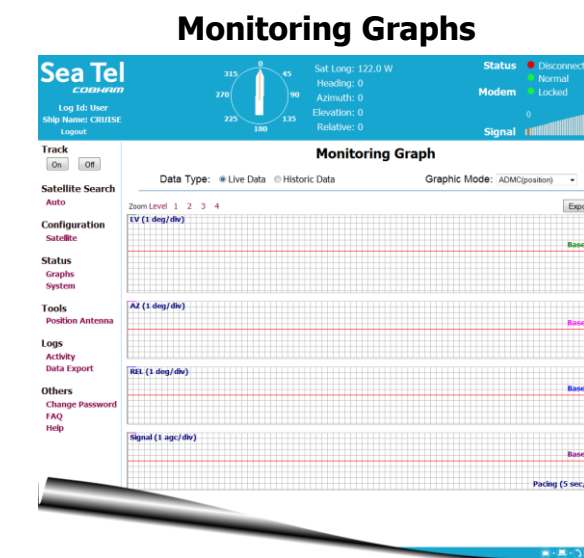


- The Graphs Status page presents user with the means to monitor either live or historical critical system functions via strip chart recordings.

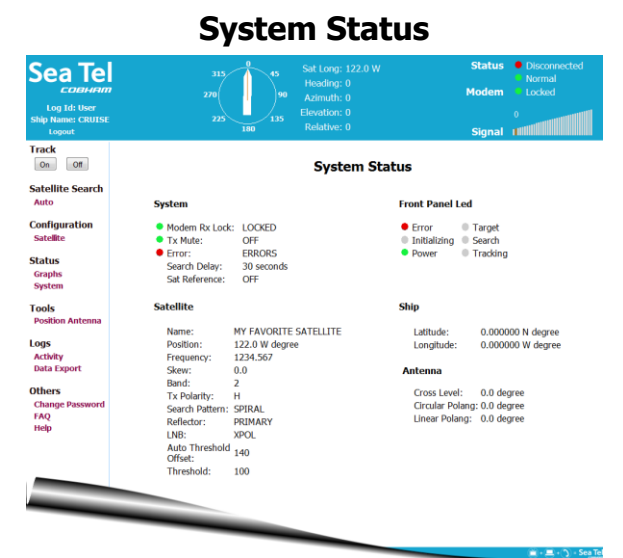


- The System Status page presents user with relevant system status updates.

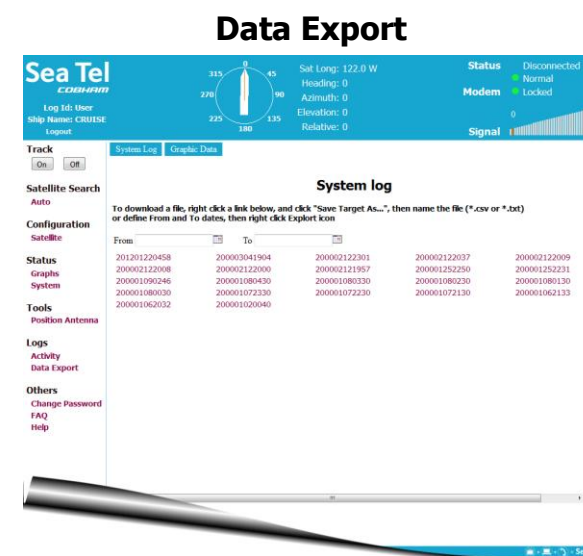


- The Data Export page presents user with the ability to download historical system log files for service reports.

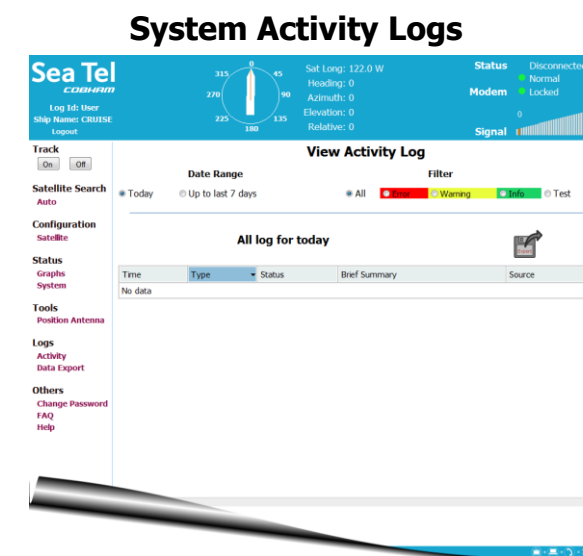

- The System Activity Logs page presents user with the ability to view historical Error, Warning, or Informational Logs.

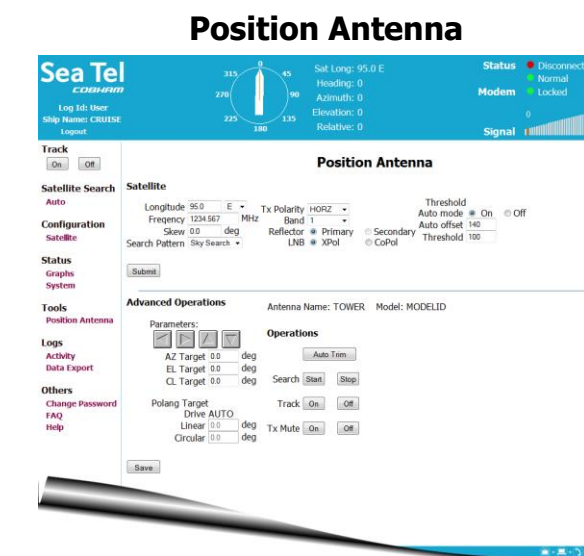


- The Position Antenna page presents user with the ability to manually control the antenna system.

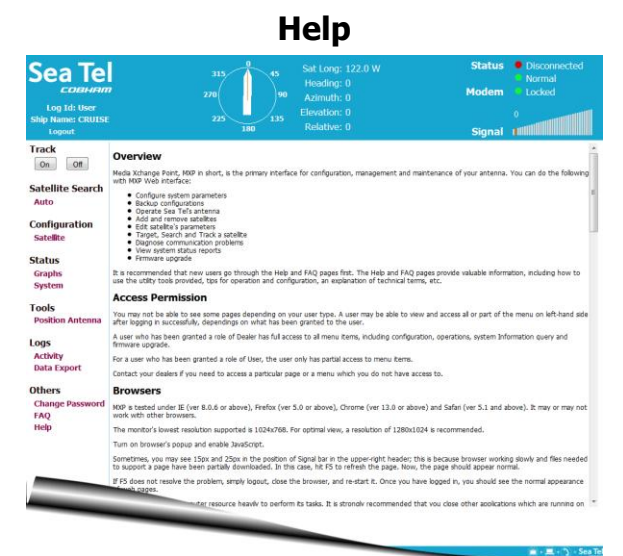


- The Help page presents user with operational tips for commonly used system functions.

Changing Satellites

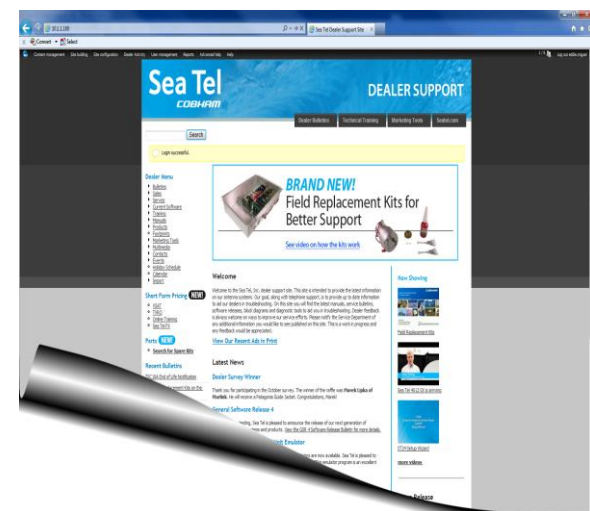


- Open up a web browser and type in 10.1.1.100 into the address bar and hit enter. (Assumes Default IP Address)

- Login into the MXP Web Interface

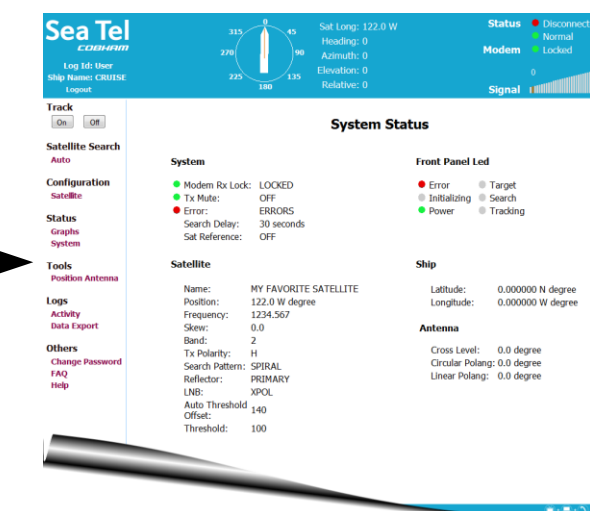

- On the System Status landing page, click on the "Auto" Satellite Search menu selection.

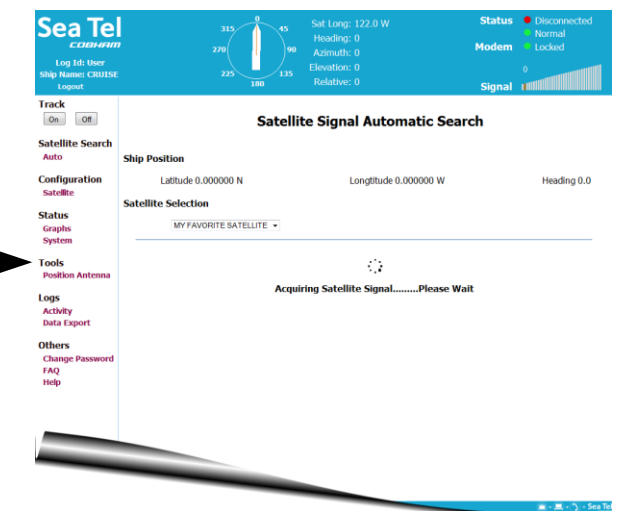

- Using the drop down menu, select the desired satellite preset.

Sea Tel Authorized Dealer

NOTES: _____ Dealer Name: _____ Dealer FAX: _____
 _____ Dealer Address: _____ Dealer Website: _____
 _____ Antenna Model: _____
 _____ Antenna S/N: _____
 _____ Dealer Phone: _____ Commissioned Date: _____