


Access Controller FB-10 Bridge Card

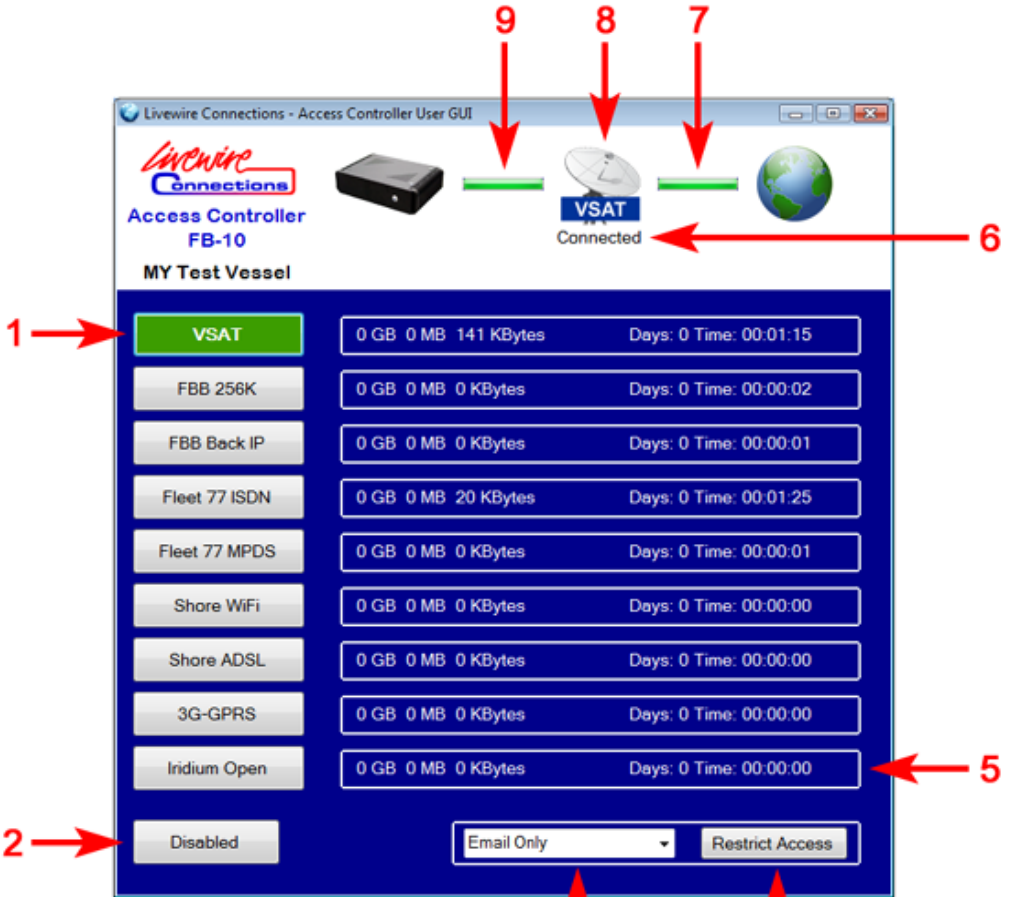

1. Select to connect to named service.
2. Select to disconnect all services.
3. Use the drop down to select which Firewall Group will be applied.
4. Select to apply preconfigured Firewall Settings for the selected Firewall Group (#3).
5. Counter displays the volume and time of data measured at the WAN interface.
6. Current Connection Status and Error messages.
7. Status of the connection between the Modem Device and the Internet.
8. Icon representing the current connection as defined in the Service Template.
9. Status of the connection between the Access Controller and the Modem Device.


Note: An active connection will be dropped if you close the User GUI window unless 'No GUI Required' is selected in the Admin GUI Internet Connection configuration.

Access Controller FB-10 Quick Start Guide




1. Connect 'Vessel LAN' port (LAN 1 as shown below) to your onboard network switch or computer. (Crossover cable may be required for direct connection to a computer.) The default IP address of the FB-10 and FB-10 Pro, FB-10 Pro RM is 192.168.5.1


FB-10 Interface Diagram

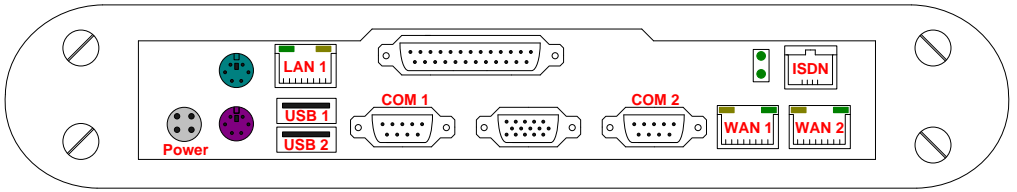

FB-10 Pro Interface Diagram

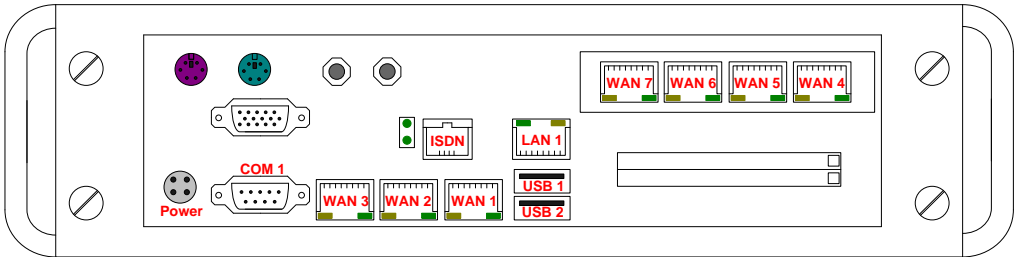

FB-10 Pro RM Interface Diagram

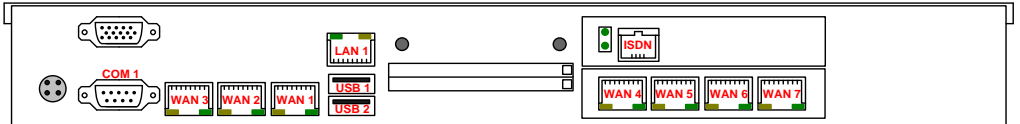

2. As factory default the FB-10 has DHCP Server enabled. Ensure that your computer is configured to 'Obtain an IP address automatically' and 'Obtain DNS server address automatically' navigate to <http://192.168.5.1> in any web browser.
3. Click on the link to download the User Manual (Requires Adobe PDF Reader).
4. Click on the link to download and install the Access Controller Software on each PC requiring control of the Access Controller. Save the ZIP file to your Desktop. (AccessController_Setup.zip)
5. From your Desktop extract all the files in the folder AccessController_Setup.zip and run Setup.exe
6. Follow onscreen instructions to complete the software installation.
7. Run 'Access Controller' icon from the desktop.
8. Enter the default Administrator username (*admin*) and password (*password*). Select Admin GUI and press OK.
9. Refer to the user manual for instructions to configure your internet connections and firewall settings. If you are unable to connect refer to the User Manual appendix for Troubleshooting.